

SAFETY CONTROL

External control

1. Turn on the ignition, parking lights and front and rear fog lights. Then go out and check first parking lights and front fog lights and then check tail lights and rear fog lights and last lights for the registration plate.
2. Turn on and check half beam, left indicator and tires on the left side.
3. Turn on and check full beam, right indicator and tires on the right side.
4. Ask someone to press the brake pedal and check so that the brake lights are working.

Internal control

1. Seatbelt. Drag the seat belt hard forward. Then it shall stop.
2. Horn. Hunt the horn.
3. Fan. Put on the defroster and feel with your hand so that there are air coming from the fan channels.
4. Windshield wipers. Flush the window, check so that the windshield wipers are working properly.
5. Foot brake. Pump the brake up and down and when you do this you shall experience that the brake feels harder and harder.
6. Brake servo and power steering servo. Pull the steering wheel hard to one or the other side and at the same time press the brake hard and then start the car, if the steering wheel is releasing and the brake is loosening the servo systems works as it should.
7. Parking brake. The parking brake must be engaged! First put in either the first or the reverse gear. Then press the button for the parking brake upwards with your fingers. Try to drive forward or reverse and then the parking brake shall stop the car from driving.

Under the hood

Point out and in case it's possible check the level.

1. Engine coolant. (Glycol and water). Shake the container and check the level.
2. Washer fluid (washer fluid and water).
3. Brake fluid.
4. Dipstick. Lift up the dipstick and wipe it off, insert the dipstick and pull it up again and then check the correct level.
5. Here is where you fill up the engine oil.
6. Battery.
7. Fuses.

